

LENTECH AUTOMATICS

THE INNOVATOR OF AOD PERFORMANCE



**A REVOLUTION IN OVERDRIVE
TRANSMISSIONS**



PRODUCT MANUAL

Introduction

As a long time mechanic and drag racer, Len Bertrand recognized the need for a performance overdrive transmission. Being a transmission specialist, Len was familiar with the Automatic Overdrive which had been in production since 1980. In 1990, his personal project car (1979 Capri) was fitted with an AOD to replace the C4. Within weeks of the installation, the transmission had failed. After carefully examining oil circuit diagrams, it was determined the factory shift pattern had been a major factor in the transmissions early demise. Upon this discovery, Len constructed the first valve body with the 1,2,3/4 shift arrangement. It was soon after, (with these modifications) other local enthusiasts began requesting that these modifications be performed to their own project cars. As a result of growing interest and demand for the transmission, Lentech Automatics was founded in 1994. At Lentech Automatics, we take pride in providing you with the most innovative AOD technology available. Every product is fully tested and backed by an unprecedented warranty. We are also committed to continual development of new products and refinement of existing products. Our technical staff is trained to recommend only components appropriate to your combination. If you have any further questions relating to the installation or use of your Lentech product, feel free to call us on our technical hotline.

Congratulations on your purchase of a Lentech Product!



Table of Contents

<u>Page</u>	<u>Item</u>
3	<u>Disclaimer</u>
4	<u>Transmission/Convertor Installation</u>
8	<u>Valve Body Installation</u>
11	<u>TV/Direct Clutch Test Port Locations</u>
11	<u>Trans Cooler In/Out Ports</u>
12	<u>Drilling Locations</u>
13	<u>AOD Wiring</u>
13	<u>Legend</u>
14	<u>Street Terminator/Strip Auto</u>
15	<u>Strip Terminator w/Brake</u>
17	<u>Strip Terminator w/Brake, 2-Step</u>
19	<u>Strip Terminator Lockup w/2-Step</u>
21	<u>AODE/4R70W Connector pin diagrams</u>
24	<u>Maintenance</u>
25	<u>Operation</u>
27	<u>Transmission Cooling Tips</u>
29	<u>Troubleshooting</u>
32	<u>Product Options</u>
34	<u>Order, Return and Cancellation Policies</u>
35	<u>Warranty</u>

IMPORTANT

Please read this disclaimer before installing this product. This is a racing product, and is not guaranteed to comply with all Federal or State Highway regulations. We are not responsible for the accidental selection of a gear ratio that may be inappropriate for road speed, or for any damages incurred by the misuse of this product however caused.

By installing this product you are claiming: You have read and understand that Lentech Automatics is not responsible for the use or misuse of the product, or the vehicle in which it is being used.

A professional technician should carry out installation. Any technical questions not addressed in these instructions may be directed to Lentech Automatics staff.

Transmission / Convertor Installation

- The vehicle should be raised to a minimum height of 1.25 feet. This will enable you to move around quite freely under the vehicle.
CAUTION: jack stands or ramps should be used under the car. DO NOT attempt to remove the transmission when car is on jacks or ramps. It is recommended that you rent a transmission jack to lower, and raise the transmission, as this is the easiest method. You may also use a floor jack, as long as you use caution.
- Drain transmission. This can be done by removing the Oil Pan, or in some cases, you may have a drain plug on the pan. Replace pan or drain plug when drained.
- Remove front dust cover. This will enable you to remove the convertor bolts. There are (3) bolts on G.M. and (4) bolts on Ford. You will have to rotate the engine in order to remove all of the convertor bolts.
- Remove starter (on Ford).
- Disconnect all linkages, electrical connectors, vacuum lines, speedometer cables, etc. (NOTE: on some vehicles, transmission shift is controlled by a "throttle valve cable" which should be disconnected at the carburetor or throttle body.)
- Unbolt drive shaft and remove. Take care that the U-Joint cups do not fall off as you will lose the needle bearings inside the cups.
- Place transmission jack under the oil pan and remove the cross member.
- Disconnect cooler lines. It is best to use a flare nut wrench so you will not damage the cooler line fittings. Disconnect filler tube and remove.
- Remove all (6) bell housing bolts. Take a long, heavy screwdriver or pry bar and pry the transmission and torque convertor away from the engine as a complete unit. This should take very little pressure. If resistance is felt, check that all bolts are out. After doing this, lower the jack slowly, making sure all linkages, cooler lines, electrical connectors, vacuum lines, etc. are clear of the transmission. Place on a work bench if one is available.
- Remove torque convertor by pulling it straight out of the bell housing.
- Remove the flex plate from the end of the crankshaft and check for ring gear wear and any visible cracks as it is a must to replace if either one of these conditions exist. In some cases it will be necessary to enlarge the flex plate holes to accommodate the larger size bolts used in our convertors. It is advised that you do not drill them any larger then 1/32 over the bolt

size. NOTE: on 5.4L/4.6L applications with small diameter, high stall convertors it is necessary to enlarge an existing set of small pilot holes to accommodate the larger bolt circle on the supplied torque converter. Replace the flex plate on the end of the crankshaft.

- Install at least 1 litre / US quart of ATF (transmission fluid) into the hub of the converter. Pour slowly as this will prelube the inside at startup. Using some type of lubricant such as Vaseline or transmission oil, lube the hub of the converter. Install carefully into the front of the transmission using a rotating motion and being careful not to damage the front seal on the pump. The converter must go all the way in so as the hub will engage the pump gears. There should be approximately 1 inch from the face of the bell housing to the mounting pad face on the converter. Replace the transmission in the vehicle by reversing the removal procedure. **CAUTION: DO NOT**, under any circumstances, try to install the converter on the motor and then try to install the transmission. **CAUTION: DO NOT** use the bell housing bolts to draw the transmission onto the engine block. The transmission must slide onto the dowel pins freely and fit flush against the engine block by hand. If this cannot be done, then the converter is not engaged all the way into the pump. Once the transmission fits flush to the engine, install (2) bell housing bolts. After doing so, check and make sure the converter rotates freely inside the bell housing. On Ford products it will be necessary to align the converter drain plug and bolt studs with the holes in the flex plate. You should be able to move the stud back and forth in the holes if installed properly.
- It is recommended that a minimum 0.062", to a maximum 0.125" clearance exist between the converter mounting pads and flywheel/converter mating surface. (Measured with converter fully installed into transmission) **FAILURES RESULTING FROM INSUFFICIENT RUNNING CLEARANCE WILL VOID WARRANTY!**
- Pour in (4) liters/quarts of transmission fluid, and have up to (4) more liters/quarts ready to go. Set hand brake, start engine, and pour 3 more liters of fluid into the transmission. Run the vehicle through the gears, check oil level and add until full. **NEVER STAND IN FRONT OF VEHICLE!.**

Throttle Pressure Setup – VERY IMPORTANT (AOD Only)

The throttle valve (TV) setup is a means to provide the AOD transmission with an input to correlate shift points with throttle position. It can be very sensitive, but once adjusted properly, provides consistent shift timing. It can also serve as a safeguard which prevents the transmission from shifting into OD under full power.

Baseline Adjustment

Cable Type

Adjust cable so it is pulled out all the way when the accelerator is placed at “Wide Open Throttle”

Linkage Type

- Adjust linkage so rod is pushed as far as it will travel with accelerator at “Wide Open Throttle”
- Test drive vehicle and if it shifts too late (delayed), back it down 1/8th of an inch and try again.
- After test drive, recheck fluid level

Custom Fabricated or Modified Applications

- For correct automatic shift control, it is necessary for throttle and TV levers to operate in synchronicity (1:1 ratio) There should be no slack in the cable at idle, and a small amount of pre-load is acceptable.

Final Adjustment Using Gauge

Illustration 1A

- Install a low-range fluid pressure gauge (0-30psi) in the T.V. port (fig. 1) and adjust to 2-10psi @ idle in 'P'. DO NOT advance TV lever. The TV pressure can damage the gauge if advanced too much!
- Monitor TV pressure periodically, especially after engine modifications which require TV cable removal.

Shifter Adjustment – VERY IMPORTANT

Incorrect shifter adjustment or incorrect shifter gating will cause premature transmission damage or failure!

- Adjustment should be made starting in the O/D position
 - Verify that with the shifter in O/D position, that the corresponding transmission shift arm is also exactly in the O/D position. Only attach cable once alignment is confirmed.
 - After this adjustment is made check gating in all other shift selector positions.
- If correct gating is only achievable in O/D position, probable causes are as follows:
 - Worn shifter cable / rod assembly
 - Incorrect shifter to shift lever ratio
 - Binding or sticking shifter mechanism
 - Incorrect gate pattern on shifter
- Re-verify all settings after road test.

Valve Body Installation

Caution: Allow vehicle to cool 2 hours from operating temperature before disassembling.

Remove:

- Oil pan bolts
- Oil pan
- Gasket
- Filter
- 25 main control bolts (8mm hex head bolts)
- Main control assembly
- Main control gasket

Install:

- Main control gasket on main control (use transmission gel or Vaseline) to secure gasket to separator plate of main control.
- Carefully match/align holes as best as possible
- Fit main control into position (be sure to engage manual lever and T.V. linkage if applicable in the process). Install all main control bolts, by hand, all the way (do not use power tools).
- Torque centrally located bolts and then the perimeter bolts in 3 stages, 30-60-90 inch pounds.
- Finally torque the centrally located bolts to 100 inch pounds.
- Double and triple check all bolt torques. One missed bolt can cause erratic shifts and premature transmission failure.
- Install filter, pan and pan gasket.
- Torque pan bolts to 70 inch pounds.
- Install 4 liters/quarts of fluid. (See page 21 for recommended fluids)
- With gear selector in neutral, the vehicle level, and the wheels approximately 6" off the ground, start engine and allow to idle

- Add fluid until full level is reached. Always check both sides of dipstick.
- When a steady full level is established, engage transmission in reverse and then drive.
- Recheck fluid level and, if necessary, add to achieve the full level mark.
- Operate vehicle through all ranges and recheck level again.
- Re-torque pan bolts after 500 miles
- See page 12 (figure 2) for drill locations if equipped with O/D delete or transbrake.

Throttle Pressure Setup – VERY IMPORTANT (AOD Only)

The throttle valve (TV) setup is a means to provide the AOD transmission with an input to correlate shift points with throttle position. It can be very sensitive, but once adjusted properly, provides consistent shift timing. It can also serve as a safeguard which prevents the transmission from shifting into OD under full power.

Baseline Adjustment

Cable Type

Adjust cable so it is pulled out all the way when the accelerator is placed at “Wide Open Throttle”

Linkage Type

- Adjust linkage so rod is pushed as far as it will travel with accelerator at “Wide Open Throttle”
- Test drive vehicle and if it shifts too late (delayed), back it down 1/8th of an inch and try again.
- After test drive, recheck fluid level

Custom Fabricated or Modified Applications

- For correct automatic shift control, it is necessary for throttle and TV levers to operate in synchronicity (1:1 ratio). There should be no slack in the cable at idle, and a small amount of pre-load is acceptable.


Final Adjustment Using Gauge **(Illustration 1A)**

- Install a low-range fluid pressure gauge (0-30psi) in the T.V. port (fig. 1) and adjust to 2-10psi @ idle in 'P'. DO NOT advance TV lever. The TV pressure can damage the gauge if advanced too much!
- Monitor TV pressure periodically, especially after engine modifications which require TV cable removal.


Shifter Adjustment – VERY IMPORTANT

Incorrect shifter adjustment or incorrect shifter gating will cause premature transmission damage or failure!

- Adjustment should be made starting in the O/D position
- Verify that with the shifter in O/D position, that the corresponding transmission shift arm is also exactly in the O/D position. Only attach cable once alignment is confirmed.
- After this adjustment is made check gating in all other shift selector positions.
- If correct gating is only achievable in O/D position, probable causes are as follows:
 - Worn shifter cable / rod assembly
 - Incorrect shifter to shift lever ratio
 - Binding or sticking shifter mechanism
 - Incorrect gate pattern on shifter
 - Re-verify all initial settings after road test.

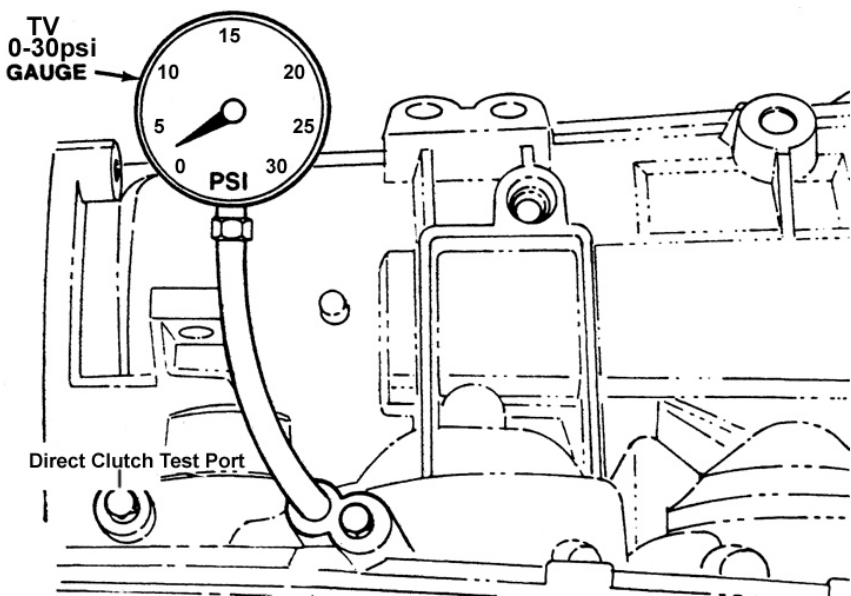


1A: TV/Direct Clutch Test Port Locations

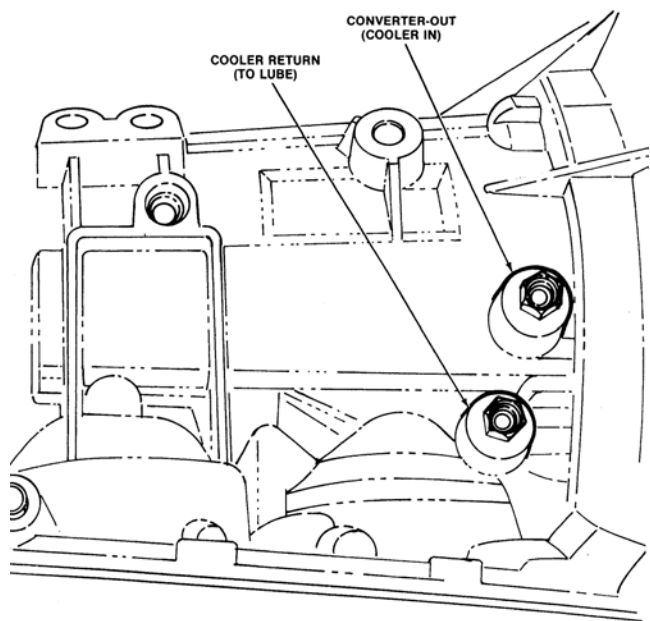

1B: Trans Cooler In/Out Ports (AODE/4R70W Reversed)

Drilling Locations

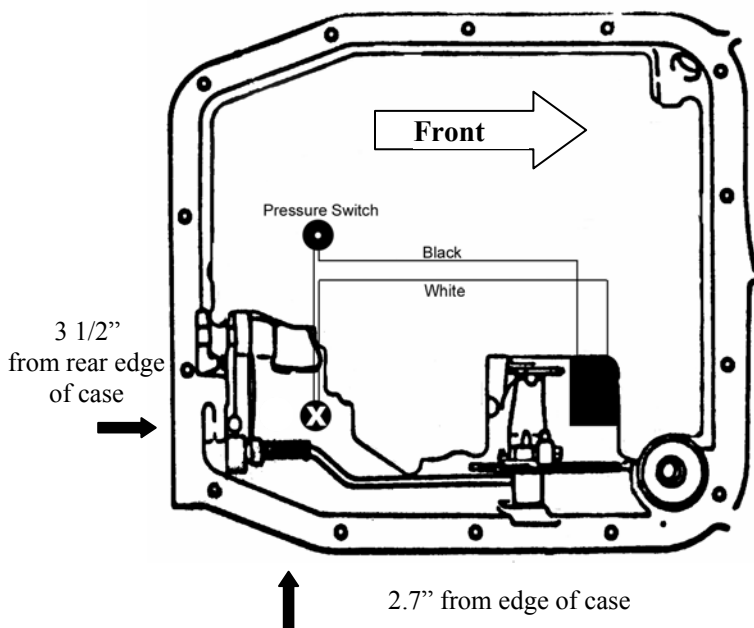

2: Wiring/Drill locations


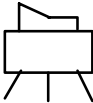

 

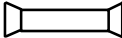
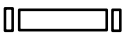
 



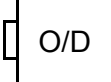
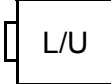


Important: Park rod is not to contact fittings!

Location for hole to be tapped for case connector


NOTE: Drill bit should be $21/64$ ", tap hole to $1/8$ " NPT.

Pressure Switch: Delco Part # 08642473


Wiring Legend

	Transbrake Button
	O/D Delete Switch or O/D Enable Switch
	Fuse Holder
	Relay
	Scotchloc Connector
	Crimp Connector
	Posiloc Connector
	Crimp Connector
	Ring Terminal Connector
	Wire Loom
	Firewall & Grommet
	Overdrive Delete Solenoid
	Lockup Control Solenoid
	Transbrake Solenoid
	Pressure Switch


AOD wiring, Street Series

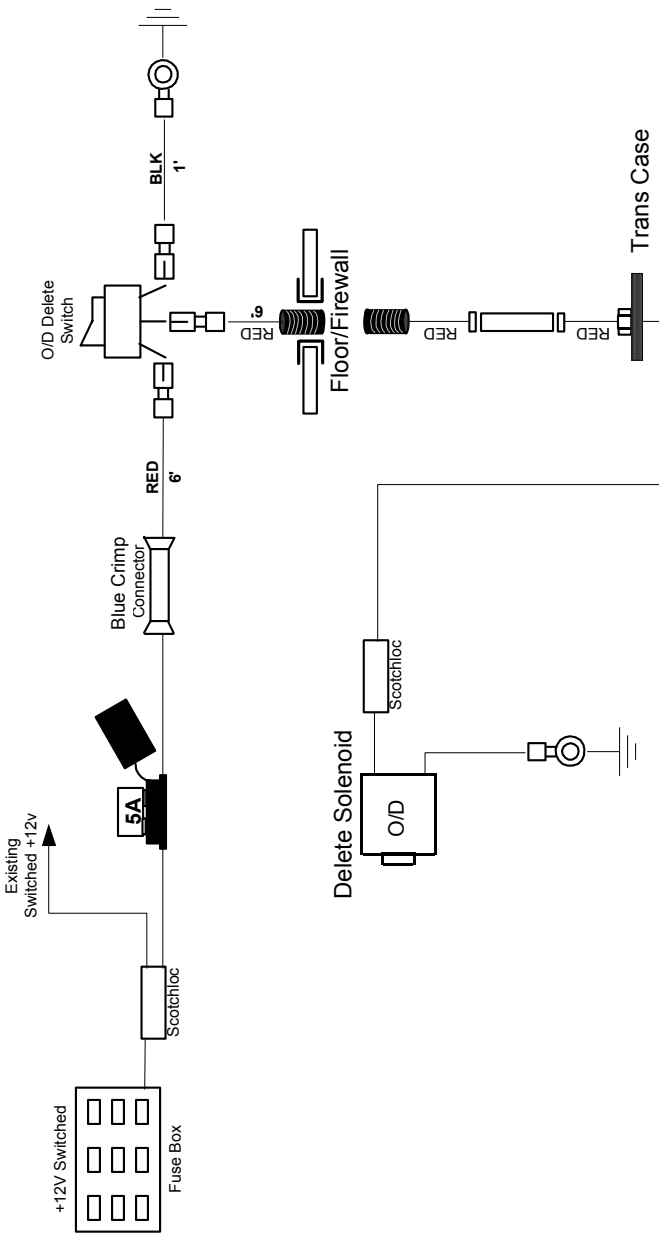


Wiring AOD Strip Terminator with Transbrake

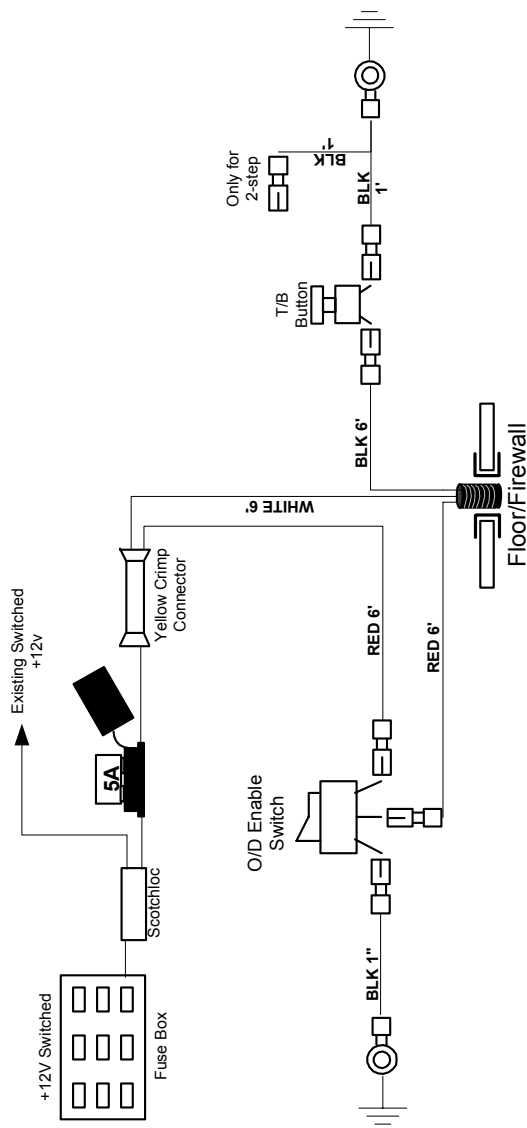


Wiring AOD Strip Terminator with Transbrake

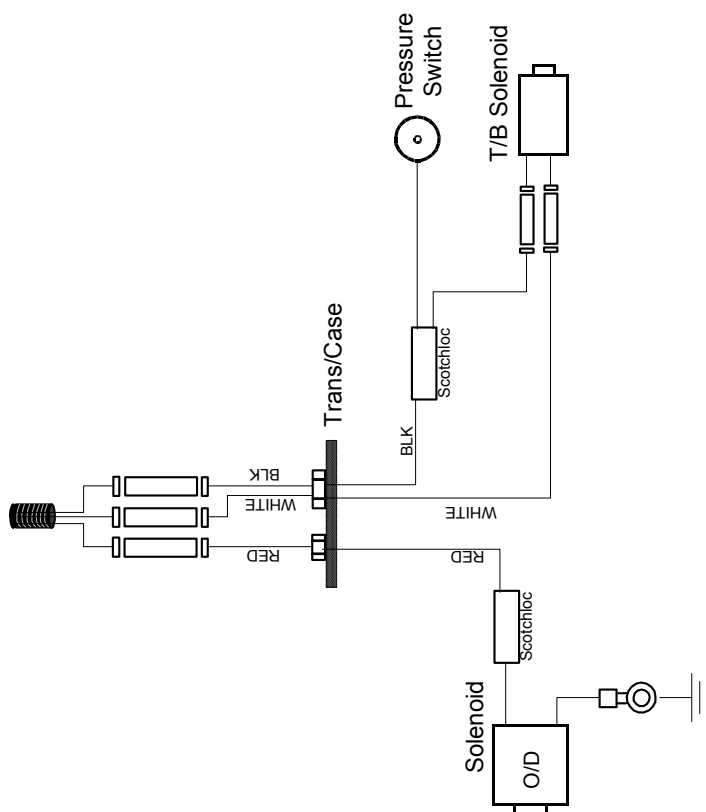


Wiring AOD Strip Terminator with Transbrake and 2-Step

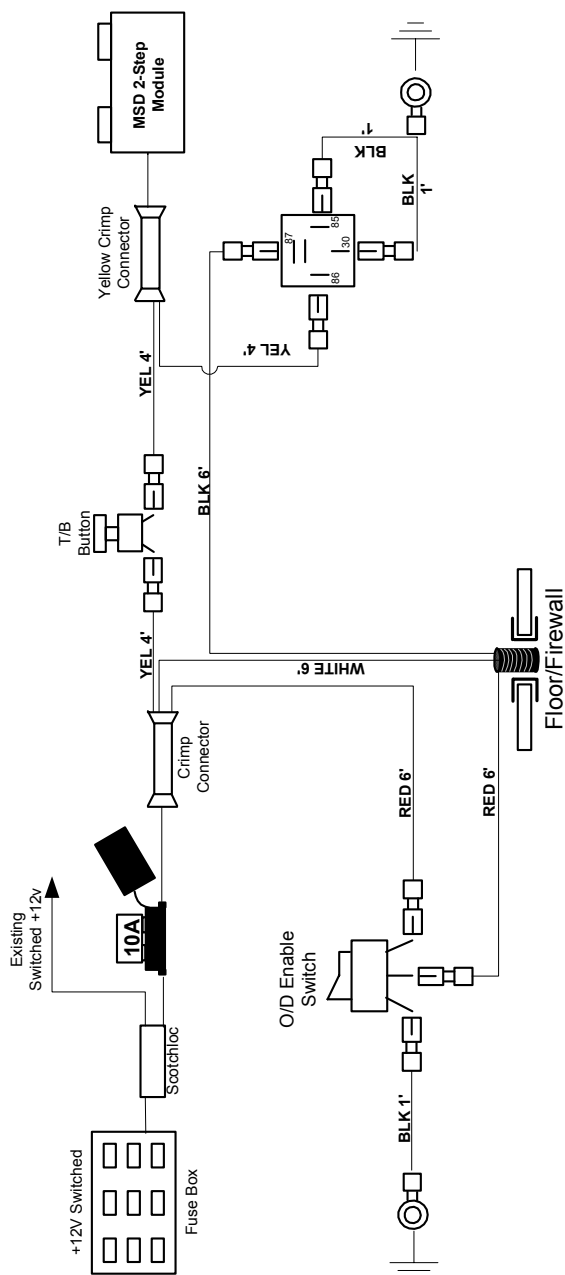


Wiring AOD Strip
Terminator with Transbrake
and 2-Step

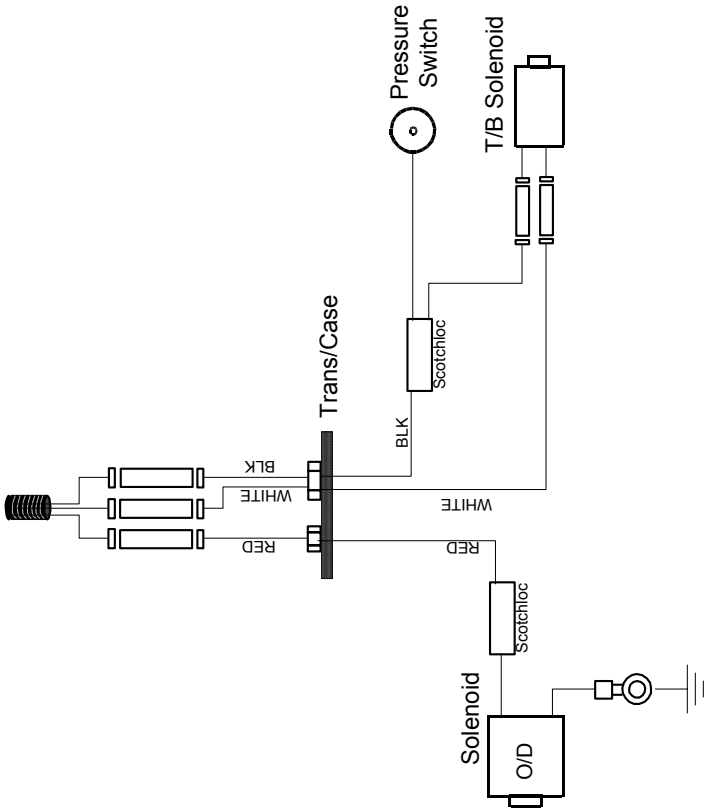

Wiring AOD Strip Terminator with Transbrake and 2-Step

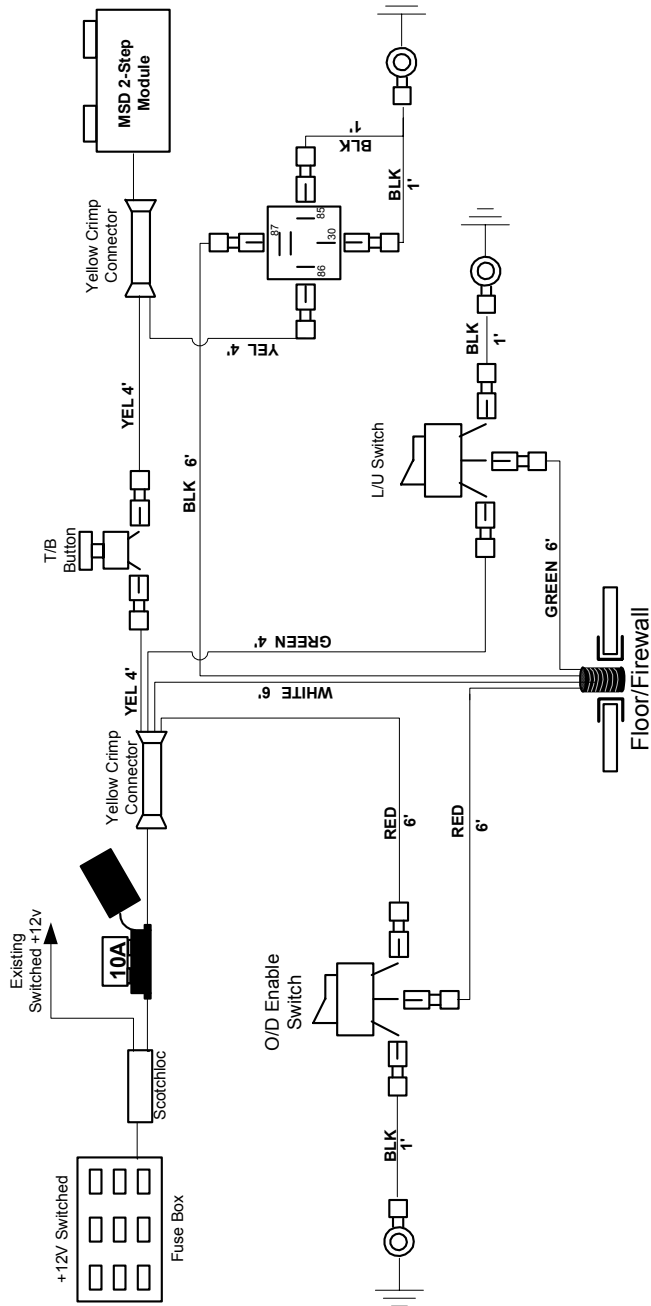


Wiring AOD Strip Terminator with Transbrake and 2-Step

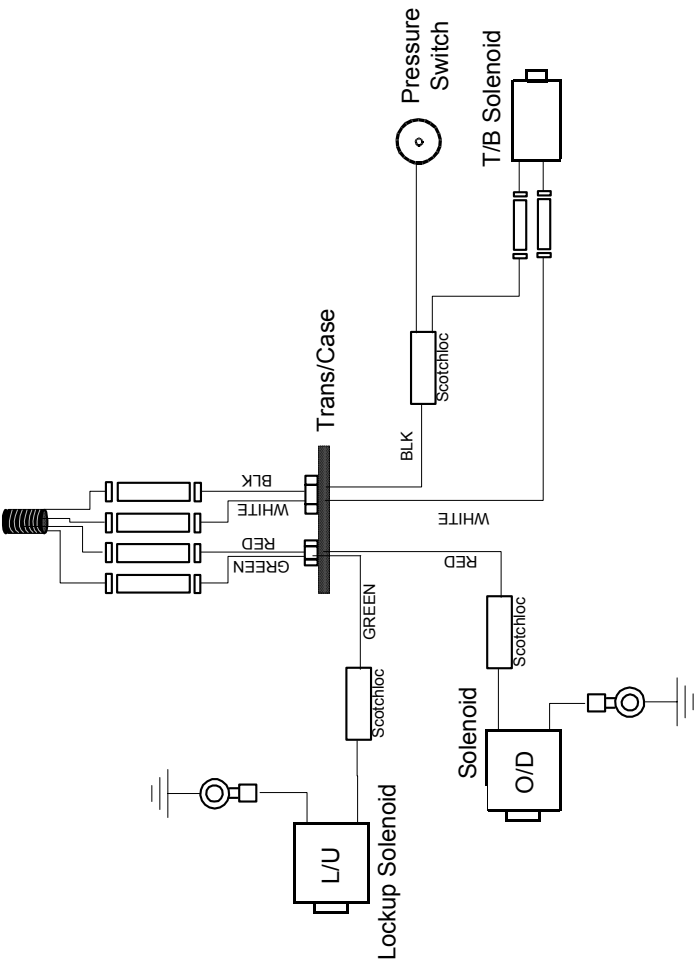

Connector Pin Diagrams


AODE/4R70W Up to 1997
White Bulkhead Connector
(Vehicle Harness Side)

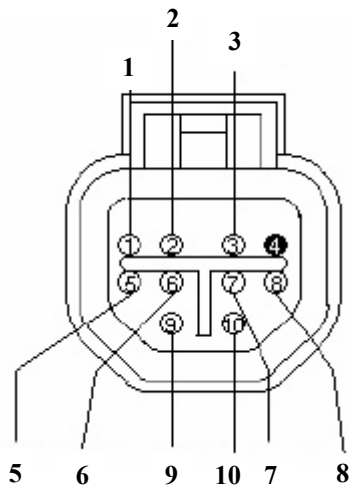

Pin Number	Circuit Function
1	Shift Solenoid #1
2	Vehicle Power
3	Torque Converter Clutch (TCC) Solenoid
4	Not Used
5	Transmission Fluid Temperature (TFT)
6	Shift Solenoid #2
7	Vehicle Power
8	Vehicle Power
9	Signal Return
10	Electronic Pressure Control (EPC)

Connector Pin Diagrams

4R70W 1998 and Up
Black Bulkhead Connector
(Vehicle Harness Side)

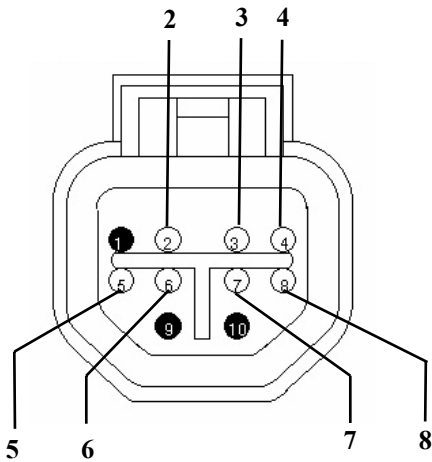

Pin Number	Circuit Function
1	Not Used
2	Signal Return
3	Torque Converter Clutch (TCC) Solenoid
4	Vehicle Power
5	Transmission Fluid Temperature (TFT)
6	Electronic Pressure Control (EPC)
7	Shift Solenoid #1
8	Shift Solenoid #2
9	Not Used
10	Not Used


For Full manual wiring, connect pin 4 to a source of fused ignition switched power (+12V)

To control OD, connect pins 7&8 to the load side of a rocker or toggle switch, and the other side of the switch to a good chassis ground (-GND)

To control converter lockup, connect pin 3 to the load side of a rocker or toggle switch, and the other side of the switch to ground (-GND)

Connector Pin Diagrams

AOD Neutral Safety / Reverse Switch Wiring

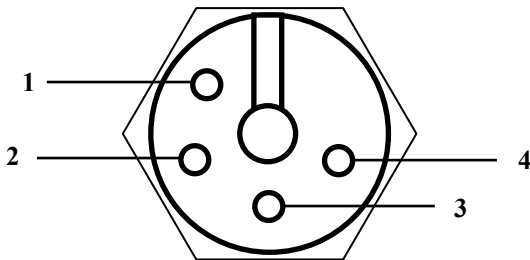

(Top view of Neutral Safety switch)

Pin Number	Circuit Function
1 & 2	Reverse lights
3 & 4	Crank Only (Park and Neutral)

All model years of AOD transmissions (1980-1993) were equipped with an integral neutral safety/reverse light switch. This switch is located approximately 4 inches above the transmission range selector lever. In the case of a retrofit or swap install, it will be necessary to acquire a short section of vehicle harness to ensure proper connectivity to the switch.

Maintenance

Important:

Road Vehicles

After initial 150 miles, replace filter and change fluid.
Service intervals are every (1)year or 12,000 miles.

Strip Vehicles

After first 5-7 passes, replace filter and change fluid.
Service intervals are every 25 passes.

All Vehicles

Re-torque all pan bolts after break-in period. Recheck all adjustments (TV and shifter) periodically or after any work is performed on vehicle.

Recommended Fluid Types

All Street series transmissions use Mercon V fluid, synthetics variants are compatible.

All Strip Terminator series transmissions use Mercon V fluid, synthetic fluids are compatible. Once vehicle exceeds 800 rwhp, Swepco transmission fluid (Part# 714-20) is recommended. Visit www.swepocousa.com for more details

Operation

Street Terminator

The basic entry level Lentech unit is the Street Terminator.

It features the 1-2-3/4 shift pattern originated by Lentech, engine braking in manual second, and electric overdrive delete (or lockout). A transmission with this valvebody is pressure modulated, meaning the throttle pressure cable controls the mainline pressure with the opening and closing of the throttle. These units are fully automatic with manual shift capability, and their shift "feel" is custom tailored to your application based on information taken about your combination at time of order.

With non-lock Street Terminator units, overdrive should remain locked out until at freeway speed.

Strip Terminator

These top-of-the-line Lentech transmissions offer the serious racer the ultimate in AOD strength.

Torque capacity is greatly increased through the application an additional clutch (Reverse input clutch) in third gear, which is typically the weak link in most automatics. This is a patented Lentech exclusive. Overdrive however is always limited to 400ft/lbs in any AOD.

A solid shaft is highly recommended for both the Strip Terminator. All Strip Terminator valve bodies operate at a fixed line pressure, determined by the application's demands. A transbrake is optional on the Strip Terminator.

Auxiliary transmission oil coolers are highly recommended with as large a capacity as space allows. Operation of the transbrake is only possible in manual first position and should be used for no longer than 5 seconds. Operation of a transmission with these valve bodies is the same as for a non-lock Street Terminator, but high pressure Strip Terminators are designed for limited street use. Manual shift models do not use TV cable.

Strip Terminator Lockup (discontinued)

The Strip Terminator Lock-Up is a hybrid based on Lentech's patented reverse/third technology. Dual input shafts and lock-up style torque converter are necessary with this transmission model (valve body NOT available separately).

The Strip Terminator lock-up features an altered power flow so that stress and torque load are completely removed from the inner "direct" drive shaft on the 2-3 shift, eliminating breakage usually associated with the OEM lock-up powerflow.

Torque load is now on the stronger, outer input shaft through the first three speeds, with lock-up being enabled in third using the original 3-4 clutch direct driving the inner shaft, via a switch in the vehicle. This allows the selection of a torque converter that provides maximum torque multiplication to accelerate the

Operation

car without the losses associated with a high stall converter thanks to the controllable lock-up feature. The lock-up valve body operates at a fixed line pressure and does not use a throttle pressure linkage. It is available in full manual shift only. This transmission is designed for and best suited to serious high RPM competition vehicles that would rarely see any on-road duty.

Overdrive Operation (All AOD Models)

All fully automatic models of Lentech AODs (Street or Strip series) with electric O/D delete require +12V to keep overdrive disabled. Manual shift models by contrast require +12V to ENGAGE O/D. NOTE: On Manual shift models pre-dating Aug 1/05 an O/D delete system was used to inhibit O/D. These models will not engage any forward gears if this system is not energized.

Street Terminator AODE / 4R70W

Street Terminator AODE/4R70W transmissions maintain fully automatic shifting for streetability. Each unit receives several key internal modifications and upgrades for increased durability. Performance is aided by the high performance stall convertor with heavy-duty convertor clutch. It is highly recommended that higher than stock axle ratio be installed (3.55 or higher) in conjunction with this transmission model. Auxiliary transmission oil coolers are also highly recommended.

Street Terminator Plus AODE / 4R70W

By fixing line pressure, one liability of the electronic AODE/4R70W can be eliminated. Lockup can be eliminated to reduce rotating mass in the convertor and prevent contamination from convertor slippage. The Strip Terminator AODE/4R70W is available with or without a transbrake. Both models are available in auto or manual shift.

TRANSBRAKE MODELS: On some early models equipped with transbrake, it is possible to engage the transbrake in any forward gear (except overdrive), DO NOT use the transbrake unless the vehicle is at a COMPLETE stop. In order to prevent severe driveline damage, a dual in-series switch setup is preferred. (Main trigger and separate arming switch). Newer Lentech AODE/4R70W transbrakes only operate in manual 1st. To identify, verify the following: early transbrakes had 2 copper transfer tubes on the valve body routed behind the shift solenoids. New designs have a single copper tube in this location, and a steel tube routed around the filter threaded into 90 degree brass fittings.

Excessive up and downshifting to and from overdrive can cause premature transmission wear and/or 3-4 shaft failure.

Operation

Strip Terminator AODE / 4R70W

Through the use of fixed line pressure, improved input shaft materials and patented Lentech reverse/third technology, the Strip Terminator AODE / 4R70W dramatically increases torque capacity over ANY existing 4R70W designs. Available in manual or automatic shift models with / without transbrake. This model may be ordered with or without converter clutch lockup operation. NOTE: If converter lockup is requested, a multiple disc unit is recommended.

Transmission Cooling Tips

When choosing a transmission cooler, it is preferable to use one that is not “self regulating”. Lentech Automatics recommends the use of auxiliary transmission coolers with a rating of 20,000 GVWR for all of its products. The temperature of the fluid in an automatic transmission greatly affects its lifespan and operation. Excessive fluid temp will eventually harden seals and breakdown transmission fluid which can lead to premature transmission failure. **Any automatic transmission equipped with a high stall torque converter should have a transmission temperature gauge installed in the vehicle.** Ideal fluid temperature is 200 degrees Fahrenheit or less, with the maximum allowable being 240 degrees Fahrenheit. This temperature should be measured in the sump pan for the most correct reading. If excessive transmission fluid temperature persists a simple cooler flow volume check may help to diagnose the condition of the transmission pump, oil cooler and lines.

To perform the cooler flow check, complete the following steps:

- Disconnect transmission oil cooler output line (returning to transmission) (Refer to illustration 1B)
- Install small length (3-4 foot) of hose to oil cooler output fitting
- Place hose into pail or basin with a capacity of 5 gallons. Secure to pail / basin or have someone hold it in place.
- With the vehicle in park, start the engine and run for 30 seconds and shut down. **Do not run engine for longer then 30 seconds or damage can result.**
- Re-install cooler lines as per original installation.
- Measure volume of transmission fluid collected. 2 quarts is average cooler flow.
- Re-install transmission fluid or same volume of new fluid.

Placement of Transmission Coolers

Whenever possible transmission oil coolers should be placed in the front of the vehicle, in direct airflow. If mounting the transmission cooler to a condenser or radiator, use a suitable spacer between the components to allow an air gap. Where this is not feasible, a small electric fan can be used to generate the required airflow.

Transmission Cooler Lines

Factory transmission cooler lines are usually 5/16" steel, which is adequate for mild street machines. In more extreme conditions 3/8" steel or -6AN braided lines yield greater volume in conjunction with associated fittings. Do not run lines in close proximity to exhaust components and avoid tight radius bends. Threaded cooler ports in th case are 1/4" NPSM

Troubleshooting

General

No Movement Forward or Reverse

- Manual valve not engaged to detent selector plate
- Low fluid level
- Pump damaged
- Burnt clutches
- Loose valve body bolts
- Plugged filter
- Loose pump bolts

No Movement Forward

- Disconnected manual valve
- Burnt forward clutches
- Improper shift linkage adjustment
- Missing or damaged forward clutch seals
- Stuck 3-4 shift valve
- O/D delete system not connected or energized.

No Movement Reverse

- Burnt reverse clutches
- Broken low/reverse band
- Low & reverse servo piston damaged
- Stuck transbrake solenoid or electrical malfunction
- Missing or damaged reverse clutch seals

Delayed Engagement

- Low fluid level
- Defective seals (forward or reverse) in clutch assembly
- Plugged filter
- Loose valve body bolts
- Worn pump

No Upshift

- Stuck governor
- Governor installed backwards
- T.V. plunger jammed
- T.V. cable jammed or incorrectly adjusted

Troubleshooting

- Stuck valve body
- Missing governor rings

No Upshift When Cold

- Stuck governors
- Stuck valve body

No 1-2 Upshift

- Broken intermediate one way clutch
- Jammed 1-2 shift valve
- Damaged or missing intermediate clutch or seals

No 2-3 Upshift

- Burnt 3-4 clutch assembly
- Damaged or missing 3-4 clutch seals
- Stuck 2-3 shift valve
- Loose valve body bolts
- Incorrectly aligned valve body gasket
- Broken 3-4 shaft

No 3-4 Upshift

- O/D servo in not engaged to O/D band strut
- Burnt or Missing O/D band
- Damaged or missing O/D servo seals
- No 3-4 accumulator on pre-89 models (N/A on Lentech valve bodies)
- Broken 3-4 shaft

Soft Mushy Shifting

- Incorrect shifter adjustment (shift lever not detenting positions correctly)
- Low or inaccurate fluid reading

Shift Quality & Driveability

Early Upshifts

- T.V. cable disconnected or incorrectly adjusted
- Loose valve body bolts
- Incorrectly aligned valve body gaskets

Troubleshooting

Late Upshifts

- T.V. cable stuck or incorrectly adjusted
- T.V. plunger jammed
- Jammed governor assembly

Harsh 4-3 Downshifts on Deceleration

- T.V. cable incorrectly adjusted or jammed

Trans Slips or Engine Cuts Loose Under Hard Accel in 2nd Gear

- No O/D delete function
- No T.V. cable linkage

No 3-4 Delete Operation

- Wiring incorrect or Low voltage to 3-4 delete solenoid
- Plugged solenoid or valve body
- Defective solenoid
- Valve body gasket incorrectly aligned
- Loose valve body bolts

No Trans Brake Operation

- Wiring incorrect or low voltage to trans brake solenoid
- Missing bracket on trans brake solenoid
- Loose valve body bolts
- Gear selector not in manual 1st position
- Stuck governor
- Stuck 1-2 shift valve
- Missing or damaged reverse clutch sealing rings

Trans Brake Always on in Manual 1st

- Stuck trans brake valve
- Plugged trans brake solenoid
- Shorted 3-4 pressure switch
- Incorrect wiring of trans brake circuit
- Shorted trans brake button

Product Line

Valve Bodies

AOD Street Cruiser

AOD Street Terminator AOD (calibration #1,2L,2N,3)

Street Terminator AODE/4R70W (calibration #1,2,3)

Strip Terminator AOD (F/M or auto shift)

Strip Terminator AOD with Trans Brake (Full Manual only)

Strip Terminator AODE/4R70W (F/M or auto shift)

Strip Terminator AODE/4R70W with Trans Brake (F/M or auto shift)

Transmissions

Street Cruiser AOD

Street Bruiser 4R70W

Street Terminator AOD/AODE/4R70W

Strip Terminator AOD/AODE/4R70W

Convertors

Street Cruiser (12" Non-Lockup)

12" SS (Lockup or Non-Lockup)

10.5" or 9.5" Bracket Master (Lockup or Non-Lockup)

9", 8" or 7" Racemaster (Non-Lockup)

Shafts

Hardened Billet 1-piece AOD

Hardened Billet Outer AOD

Hardened Billet Direct Inner AOD

Hardened Billet 4R70W midshaft

Product Options

Planetary Gear Sets

- | | |
|------------------------|----------------------|
| 2.84 OEM Cast Aluminum | 2.84 Billet Aluminum |
| 2.66 Billet Aluminum | 2.40 Billet Aluminum |
| 2.18 Billet Aluminum | |

Bellhousing Options

- 429/460 ----- FE (Ford Family)
4.6L->AOD or 4R70W ----- SBF157

Adapter Plates

- | | |
|----------------|---------|
| 429/460 to AOD | GM->AOD |
|----------------|---------|

Miscellaneous

- Lentech Cast aluminum oil pan-----Flexplates
Shift lever options-----Transbrakes
Oil coolers-----TV Cables

Ordering / Return and Cancellation Policies

At Lentech Automatics we provide a service of "custom" built automatic transmissions to enthusiasts around the world.

The requirements for ordering a Lentech custom built transmission and components are as follows:

- Orders taken by phone require VISA or MasterCard only
- Orders accepted by mail are by cheque or money order only (no cash)
- Orders on complete "custom" built transmissions require a minimum 50% deposit. Balance due 48 hours before ship date.
- Orders on complete "custom" built transmissions are subject to a minimum \$100 cancellation fee within 24 hours of order received.
- Orders on complete "custom" built transmissions cancelled after 24 hours are subject to a 50% cancellation fee
- No refunds or credits for custom built transmissions and torque converters.
- No refunds of shipping costs for returned items
- Damaged or missing components must be reported to Lentech Automatics within 24 hours of receiving shipment

To return merchandise, you need prior authorization from Lentech and to complete a Return Merchandise Authorization (RMA) form. The form can be found at www.lentechautomatics.com or a copy can be faxed to you.

All returns from within the US must be sent (freight prepaid) to:

Lentech Automatics C/O Bay Brokerage
42832 NYS Route 12,
Alexandria Bay, NY,
13607, U.S.A.

All returns from within Canada or other countries must be sent (freight prepaid) to:

Lentech Automatics,
3835 McBean St,
Richmond, ONT,
K0A 2Z0
CANADA

Warranty Information

When purchased with our torque convertor Lentech Automatics Transmissions are covered by a lifetime limited warranty from the date of invoice against defects in workmanship and materials ***See below for details**

All Lentech Automatics custom built torque converters are guaranteed for a period of 2 years from the date of invoice against defects in workmanship and materials. ****See below for details**

All Lentech Automatics custom built valve bodies are guaranteed for a period of 3 years from the date of invoice against defects in workmanship and materials. *****See below for details**

Lentech Automatics is a company with a strong commitment to customer satisfaction. As such, we reserve the right to extend warranties at our own discretion.

Lentech Automatics AOD/AODE/4R70W transmissions are covered by a limited lifetime warranty. If the unit requires repairs, return it to Lentech and the maximum cost to restore it to original spec is \$995.00 per occurrence. These figures do not include the torque converter or other upgrades not originally purchased. Lentech Automatics' transmissions warranties do not cover any shipping, duties or brokerage fees or any other charges incurred in the return of our products. We accept no responsibility for any expenses or damages resulting from the purchase, installation and use of our products. All prices are in U.S. dollars. "Warranty is transferable."

****Lentech Automatics' torque converters warranty covers any defects in parts and workmanship for a period of 2 years. We accept no responsibility for any expenses or damages resulting from the purchase, installation and use of our products. Shipping, duties or brokerage fees or any other charges incurred in the return of our products are not included in the warranty.**

*****Lentech Automatics' valve bodies warranty covers any defects in parts and workmanship for a period of 3 years. A minimum \$100 service fee applies after the first year (not including parts). We accept no responsibility for any expenses or damages resulting from the purchase, installation and use of our products. Shipping, duties or brokerage fees or any other charges incurred in the return of our products are not included in the warranty. 30-day satisfaction guarantee on all valve bodies: If within 30 days you are unsatisfied with our valve body, return for a full refund.**

Lentech Top Performers



Jeff Thompson

1990 Ford Mustang LX

OSCA True Street @ 3220 lbs

8.79@160.66mph

Strip Terminator

8.8 rear with 3.55gears

Cobra jet aluminum heads

Victor intake w/950hp Holley

Single stage NOS (1000+ whp)

Dave King

2004 Ford Mustang Cobra

10.52@135.89mph

4R70W Street Terminator Plus

Whipple Charger @24psi

60lb injectors w/ MD fuel line upg.

9.5" 4K rpm convertor

Stainless Works Headers/exhaust

JLT cold air induction



Len Bertrand

1971 Ford Maverick

OSCA Pro Stock

9.33@147mph

Strip Terminator Lockup

358CI NA

Blue Thunder 430 heads

Single 4BBL Carb

9" rear with 5.67 gears



Lentech Automatics

3835 McBean St.

Richmond, ON, Canada, K0A 2Z0

(613)838-5390 sales & tech (613)838-3265 fax

www.lentechautomatics.com

Hours of Operation: M-F 8am-5pm EST